



WATCHING TV



DVR CONTROL BUTTONS

TAKING CONTROL OF YOUR TV

The features of your new DVR system will change the way you watch TV forever. You'll be able to do amazing things that will greatly enhance your viewing experience of live programs as well as everything you record. Just push the DVR control buttons indicated below to use the associated features.

- PLAY/SLOW MOTION**
Starts the recorded video or paused live TV currently on screen. Hold this button down for slow motion.
- PAUSE**
Freezes the action of any live or prerecorded television program. While paused, press FFWD or REW to move forward or backward frame by frame.
- FFWD**
Fast-forwards recorded or live-stored video. Press up to four times to fast-forward at increasing speeds. (Pressing play returns to normal play.)
- REW**
Rewinds recorded or live-stored video. Press up to four times to rewind at increasing speeds. (Pressing play returns to normal play.)
- RECORD**
Automatically records live TV. (One-touch record works on highlighted programs in the Guide and live TV.)
- STOP**
While watching recorded TV, pressing this stops playback, inserts live TV in the top right and gives options to keep, delete or record other episodes of your recorded show.
- REPLAY**
Jumps the program you're watching backwards 6 seconds and starts playing from that point. Holding down REPLAY jumps to the beginning of the program.
- ADVANCE**
Jumps ahead in recorded or live-stored video by 30 seconds. Hold down to continue to the end.

The Control Bar

When you use the DVR control buttons, the control bar appears as a quick reference that shows you information about the current program, including title, progress, start time and how much of the program has been stored.



Visit directv.com/dvr for more information.

Visit directv.com/dvr for more information.

WATCHING TV

RECORDING PROGRAMS

KNOWING YOUR DVR

| | | | | | | | | | | | | |
|--|---------------|---------------------|---------------|--------------------------|----------|-------------|---------------------------|---|-------------|------|-----------|---|
| | Job # | 7851 | Filename | DTV007851_DVR_Guide.indd | | Description | HD DVR User Guide | | Print Scale | None | Round No. | 7 |
| | Client | DTV | Due Date | 7/27 | INITIALS | DATE | Last User / Previous User | Last Modified | | | | |
| | Bleed | 0.125 in x 0.125 in | Traffic | CM | | | changed / freelancer | 8/4/06 12:15 PM | | | | |
| | Trim | 15 in x 9.75 in | Client Serv. | HV/LS | | | Fonts | Rapp Printer | | | | |
| | Live | 0 in x 0 in | Production | BC | | | DIN | HP Laserjet 8100 | | | | |
| | Mech built at | 100% | Art Director | CC | | | Colors | Cyan, Magenta, Yellow, Black, PMS Blue C, White | | | | |
| | Color(s) | 4C(PMS287+ProBL) | Copywriter | DC/ED | | | Placed Graphics | DS8988_B_Racing.eps, DS5217_B.eps, Page Button.psd, DS8839.eps, SwashBlue.tif, DS8829.eps, DS8828.eps, DS8827.eps, DTVPLUS_REV2.eps | | | | |
| | Varnish | Dull/Flood | Proofreader | None | | | | | | | | |
| | Paper Stock | None | Studio Artist | Andrew | | | | | | | | |
| | | | | | | | | | | | | |



RECORDING PROGRAMS



RECORDING CURRENT AND FUTURE PROGRAMS FROM THE GUIDE

1 To find a program you'd like to record, press the GUIDE button twice to see what's playing.



2 Use the ARROW keys to highlight the show, then press RECORD.



RECORDING AN ENTIRE SEASON OF YOUR FAVORITE SHOW

1 Find the show you'd like to record in the Guide. Highlight the show and press RECORD.



2 For programs that run in episodes, once you choose a show to record, you can press RECORD a second time. This will enact the Series Link™ feature, which will record every episode of your show, even if the time slot changes.



3 Press RECORD a third time to cancel the recording.



NOTE: If you're watching a show that is not part of a series (a movie, a sporting event, the news), pressing RECORD a second time will cancel the recording. **Series Link™ cannot be started with any show once that show has begun playing.**

Visit directv.com/dvr for more information.

Visit directv.com/dvr for more information.

WATCHING TV
RECORDING PROGRAMS
KNOWING YOUR DVR

T: 9.75 in

F: 7.5 in

F: 7.5 in

| | | | | | | | | | | |
|--|---------------|---------------------|---------------|--------------------------|-------------|-------------------|---|------------------|-----------|---|
| | Job # | 7851 | Filename | DTV007851_DVR_Guide.indd | Description | HD DVR User Guide | Print Scale | None | Round No. | 7 |
| | Client | DTV | Due Date | 7/27 | INITIALS | DATE | Last User / Previous User | Last Modified | | |
| | Bleed | 0.125 in x 0.125 in | Traffic | CM | | | changed / freelancer | 8/4/06 12:15 PM | | |
| | Trim | 15 in x 9.75 in | Client Serv. | HV/LS | | | Fonts | Rapp Printer | | |
| | Live | 0 in x 0 in | Production | BC | | | DIN, Arial MT | HP Laserjet 8100 | | |
| | Mech built at | 100% | Art Director | CC | | | Colors | | | |
| | Color(s) | 4C(PMS287+ProBL) | Copywriter | DC/ED | | | ■ Cyan, ■ Magenta, ■ Yellow, ■ Black | | | |
| | Varnish | Dull/Flood | Proofreader | None | | | Placed Graphics | | | |
| | Paper Stock | None | Studio Artist | Andrew | | | DS8986_C_Sunset.eps, DS8993_B.eps, DS8992_B.eps, DS8991_A.eps, DS8990_A.eps, Swash144.tif, Page Button.psd, DS8829.eps, DTVPLUS_REV2.eps, Record1.psd, Record_All.psd, DS5217_B.eps | | | |

